

1052020

Axle-back 2-1/2" dual kit with performance mufflers

2010-2014 Chevrolet Camaro SS w/6.2L

Kit Includes:

- | | | |
|---|--|------------------------------|
| 1) left rear muffler with tip # 1052021 | 1) right rear muffler with tip # 1052022 | |
| 2) 2-1/2" accuseal clamps # A25AF | 1) left hanger clamp # 2675 | 1) right hanger clamp # 2674 |

DANGER WARNING: Should the purchaser decide to install this exhaust product at home, be warned that pleasure car or light duty truck/van "bumper" jacks are intended for emergency use only. The use of frame contact jack stands in conjunction with a floor jack as main support is highly recommended to minimize accidental dropping of a vehicle while the installation proceeds.


Limitation of liability--Disclaimers: The regulation of emissions production, noise levels and safety standards is undertaken by the federal government, each of the fifty state legislatures, and by many local municipalities, towns and counties.

The manufacturer makes no warranties of merchantability, of fitness for a particular purpose, or that its products are approved for general use, or that its products comply with laws, regulations or ordinances in the states where they may be sold to the ultimate purchaser, the consumer.

The entire risk as to the conformity of this product in any such state and as to repair, should the product prove to be defective or non-conforming, is on the retail purchaser, the buyer, the ultimate consumer of such product and it is not upon the seller, distributor, or manufacturer.

In this connection, retail purchaser, the buyer, the ultimate consumer assumes the burden of the entire cost of any and all necessary service, alterations, and or repair.

The foregoing statement limits the liability of the manufacturer.

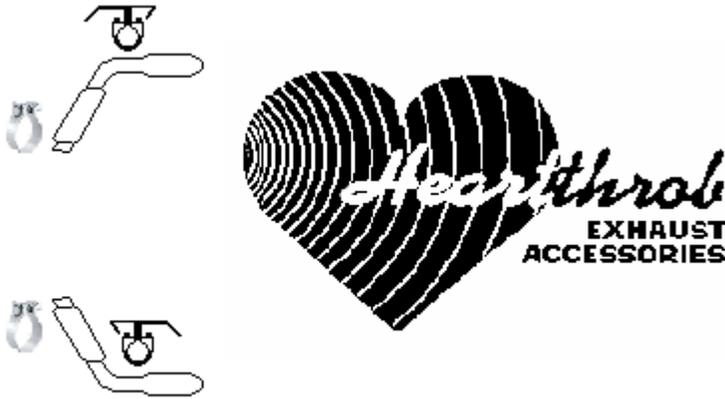

Heartthrob exhaust systems are manufactured by Heartthrob Exhaust--Litchfield, MN

Email us at mike@heartthrobexhaust.com with any questions. www.heartthrobexhaust.com
320-693-0222

1052020 Instructions:

NOTE: DO NOT TIGHTEN ANY CLAMPS UNTIL THE LAST STEP!!

- 1) Support the vehicle in a safe manner, using a shop hoist or frame contact jack stands on a level surface. Remove the old exhaust system at the rear mufflers. Cut 1.25" from the top of the weld of the muffler. Remove the O.E. mufflers.
- 2) Install the left (driver side) and right rear muffler with tips to the original exhaust system using the 2-1/2" accuseal clamps. Note: for models with the ground effects package with the stainless steel exhaust valence cut-outs, we recommend trimming the s/s exhaust tips to a straight cut tip with you cutting back to the start of the angle cut. This is not necessary, but we feel it looks better on the vehicle.
- 3) Install the left (driver side) and right hanger clamps to the rear tail pipes on the tube under the rubber hanger mounts above. Attach the wire hangers on the clamps to the o.e. rubber hanger mounts above.
- 4) Check for clearance of the frame, body, suspension members, and of all brake and fuel lines. When you are satisfied with how the system hangs, tighten all clamps.

BUILD SHEET FOR: 2-1/2" Camaro axle-back kit

PART #'S: 1052020

 1) HARDWARE KIT

 1) left rear muffler with tip # 1052021

 1) right rear muffler with tip # 1052022

INSPECTED BY: _____

DATE: _____

INSPECTED BY: _____

DATE: _____